

## Start Address Board 3006P

The Start Address Board 3006P can be used for all SOUNDLIGHT decoders. The Start Address Board is used to set the DMX start address, the DMX personality as well as the DMX HOLD mode.

### CAUTION:

The start address board comprises of sensitive electronic components, which must be prevented against electrostatic discharge during assembly and operation of the pcb.



### MOUNTING:

4 fastening holes 3.2mm can be used for screws or bolts M3. Please make sure:

- to protect the display by adding a glass or plastic (e.g. Acrylic glass) pane.
- to allow a vertical travel of at least 1mm to ensure smooth operation of the integrated encoder pushbutton.

